USER MANUAL

Congratulations on the purchase of your new digital music and video player!

Before operating the player, please read this manual thoroughly and keep it for future reference. This manual will help you use many of the exciting features that will make your experience more enjoyable,please read all the information carefully before you use the device to prevent accidents.

Catalogue

Safety precautions and maintenance----------

Function introduction----------

Player cognition----------

Outlook----------

Music ----------

Video ----------

Photo----------

eBook----------

Radio----------

Record----------

Other----------

Settings----------

TF Card Operations----------

Questions----------

Specification----------

Safety precautions and maintenance

Do not put in high temperature, humidity, or dusty environment.
Do not put in temperature over 40□, especially in summer that windows are closed in cave.
Suggest to adjust volumn down or stop the volumn if your ears feel numbness.
Do not pug out during upgrading, formatting or uninstalling, or it may cause damage to procedure.
We won't responsibly handle the troubles caused by damage to player, or repair problems caused by other reasons.
Player will charge once connect with USB interface, no matter the player is powered on or off.
Don't scrub player surface dipping with alcohol, benzyl.
Do not use this player in prohibited place, such as airport.
Do not use this player during running or walking to avoid any accidents.
Please charge player in time:
When battery quantity is not enough;
It shut down automatically after switched on.
No any reaction by pressing buttons.

We keep the right for improvement, and may design different outlook and functions. Please notice and pay attention! If any inconvenience caused by this improvement in future, please give your understaning!

Function Introduction

3.0 inch 260K TFT display
Support various music format, MP3,WMA,FLAC,APE,AAC,OGG
Support many video format, with full-screen: RM,RMVB□720*576□,
AVI□800*480□, FLV,DAT,3GP
Support browsing pictures in BMP□JPEG□GIF format
Support recording
Power saving settings, lightness adjustment, and User time of power off
Outstanding sound, supper 3D surrounding effect, and User EQ mode
Support multi-national languages
High speed of 2.0 USB transport interface, up to 4M/S
Reading while enjoy listening music, and with bookmark function
Support TF card
Portable U disk function, and support firmware upgrading

Player cognition

Power On: Slide and hold the player's power switch to the ⏻ position for approximately 3 seconds to power-on.

Power Off: Slide and hold the power switch to the ⏻ position for approximately 3 seconds to power-off. The system will power off automatically if the battery is depleted.

Lock/Unlock

In any mode, slide the Power switch to the 🔒 position to lock the player then you can prevent unintended operation.

Main interface

In the Main menu, use the touch pen or your finger to select your desired option from Music / Video / Photo/ Ebook/Radio / Record / Other / Settings, and then click the corresponding icon to enter the selected interface.

Operation instructions:

Music

Choose the "Music" option in the main menu, and then click the corresponding icon to enter into Music interface

Function description□

After going into "Play list",you can search files/folders by clicking / , then select your desired songs to play by clicking the file name or .

Options:Current Play□Resume Play□/All music/Artist/Album/My Favorite/Record/Dir

List/MediaLib Update

Remark:you can click to add the chosen item to your favourite folder after confirmation.

During the music playback, click to enter into submenu, there are 5 options:

a. Repeat mode:Once/Repeat/All/All Repeat/Intro for choice.

b. Play mode:In Order/Shuttle for choice.

c. MSEQ:3D/Bass/LEQ for choice.

d. EQ Sel:Normal/MSEQ/Rock/Pop/Classic/Bass/Jazz/User EQ for choice.

e. User EQ Setup:Slide the ball up and down to adjust the numeric value.

Click to adjust volumn..

Click “ ”to choose previous/next song, long press to keep fast rewind/fast forward..

Click to play,then click to pause playback.

A-B replay

During playing music playback, click the icon once, and the screen will display the letter “A-”. Confirm it as the starting point of the replay segment by clicking the icon once again, and point “B” will appear. Confirm the ending point of the replay segment and the replay icon A-B is set and replay between A and B will begin.. Click the icon again to cancel A-B replay.

Lyrics synchronisation

While a song is being played that is in the same folder as the corresponding lyrics file (.LRC), the lyrics will automatically be shown in the Music mode interface. The player supports lyrics files in LRC format.

Operating steps are as follows:

1.Choose an MP3 or WMA file, for example “lovemusic.mp3”.

2.Download a lyrics file from the Internet. Lyrics files have the file name extension LRC, for example “lovemusic-2007.lrc”.

3.Rename the lyrics file, for example “lovemusic.lrc”. Make sure the lyrics filename is the same as the corresponding music filename.

4.Copy both files into the same folder on the player.

5.Start playback of the music file. The lyrics will be displayed simultaneously on the screen while the music is being played.Click the screen and hold about 2 seconds,the lyric will disappear.

Video

Choose the “Video” option in the main menu, and then click the corresponding icon to enter into Video interface

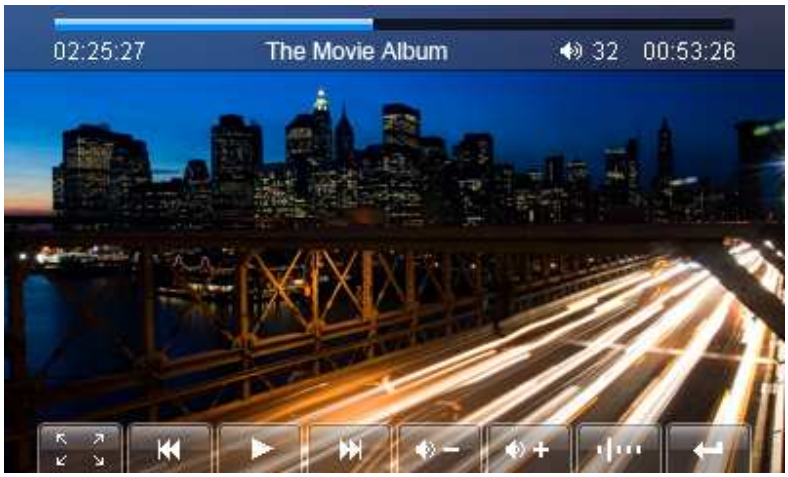

1.Click to adjust the window size.

2. Click / to select previous or next item, also click and hold it to fast rewind or fast forward.

3.Click to play,click it again to pause playback.

4. Click to adjust volumn.

5. Click to set the break point,then you can quit to listen to music, enter into video mode and click again to continue playing the rest video that you quit last time.

Remark: you can click to delete the chosen file after confirmation.

Photo

Choose the “Photo” option in the main menu, and then “Flash” folder will appear on the screen ,click it to enter into Photo interface

1. Click / to select previous/next picture.

2.Click the chosen picture name to browse

3.Click / to zoom in/out

4.Click / to rotate the picture.

Remark:Click then you can delete the chosen picture after confirmation.

eBook

Choose the “eBook” option in the main menu, and then “Flash” folder will appear on the screen ,click it to enter into ebook interface

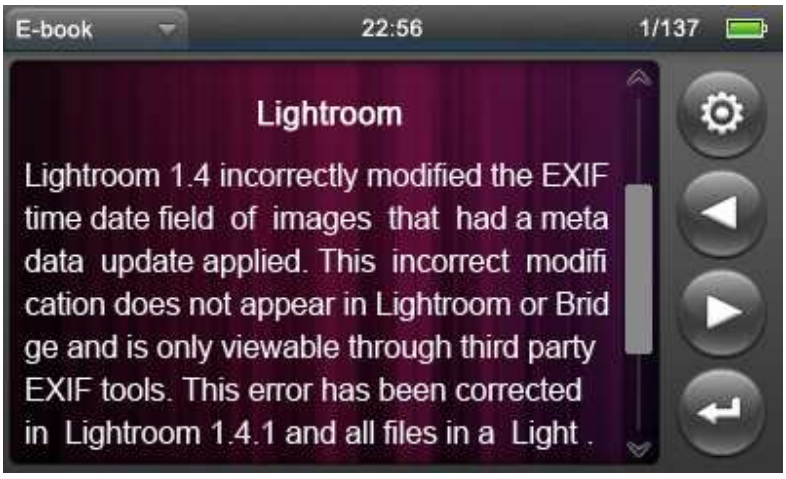
E-book
22:56
1/137
Lightroom
Lightroom 1.4 incorrectly modified the EXIF time date field of images that had a meta data update applied. This incorrect modifi cation does not appear in Lightroom or Brid ge and is only viewable through third party EXIF tools. This error has been corrected in Lightroom 1.4.1 and all files in a Light .

1.Click / to turn the pages

2.Click ,you will find sub-menus:

a.Page jump

Click / to adjust the digits,click / to adjust numeric value,click "yes/no" for final confirmation.

b.Savemark

Click "savemark"to save mark for quick searching purposes.

c.Loadmark

Click "loadmark" and select the bookmark, then it will jump to the bookmark you saved.

d.Delmark

Double click the mark you want to delete.

e.Set Font

There're 3 options: Font small, Font Mid, Font Big, double click to choose.

f.Set Color

There're 3 options: Green, Blue, Red, double click to choose.

g.Browser mode

There're 2 options: Auto mode, Manual mode, double click to choose.

h.Flip time

There're 5 options: 10s, 15s, 20s, 25s, 30s, double click to choose

3. Click to quit the read mode.

Remark:Click then you can delete the chosen item after confirmation.

Radio

Choose the “Radio” option in the main menu, and then click the corresponding icon to enter into Radio interface

1. Click to adjust volumn.

2. Click ,you will find sub-menus:

a.search by hand: click “ ”to search for the stations manually.

b.auto search: it will start searching broadcasting stations automatically, and save them.

c.preset mode: you can listen your previous save stations.

d.stereo switch:on/off for choice by double clicking.

e.receive area:China/Japan/USA/Europe for choice by double clicking.

4. Click , then click to save,click to turn pages.

5.Click saved station, then Click to delete the saved station after confirmation.

6.FM Recording

Click to enter into FM recording interface

a. Click to start recording

b. Click to pause, and Click again to start recording,.

c.Click you can save recording

d. Click ,you can set Quality and Volume.

7.Click to quit.

Record

Choose the “Record” option in the main menu, and then click the corresponding icon to enter into Record interface,please refer to FM recording.

Other

Choose the “other” option in the main menu, and then click the corresponding icon to enter into Other interface

1.StopWatch:click “start” to start,click “pause” to pause,(This function also be available by clicking“ ”).Click “clear” to clear the record.

2.Calender:click to adjust the digit: year or month, click / to adjust the numeric value.

3.Explorer:all files and folders will be shown.

Settings

Choose the “Settings” option in the main menu, and then click the corresponding icon to enter into Settings interface

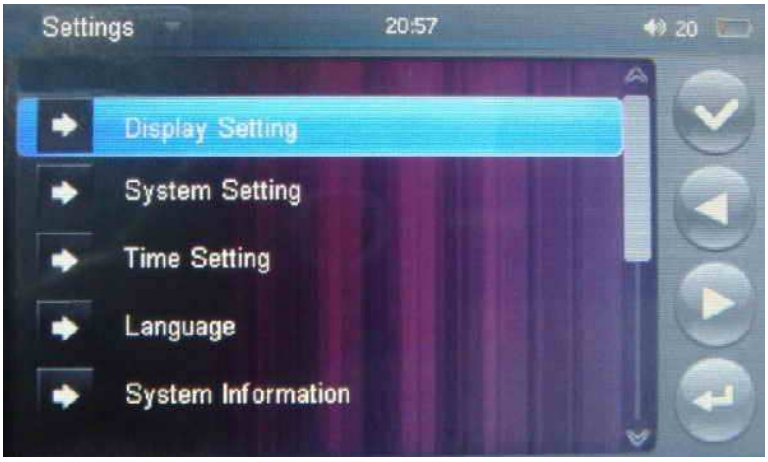

1.Display setting

There're 5 options: Light Time, Brightness, Light Mode, Move Style, Photo Browse. Double click the option to confirm your choice.

a.Light Time

There're 6 options:5s,10s,15s,20s,30s,Always on.

b.Brightness

There're 5 options: One, Two, Three, Four, Five.

c.Light Mode

There're 2 options : All Dark, Penumbra.

d.Move Style

There're 5 options: Left In Right Out, Double Move, Up In Down Out,Transps, Scale.

e.Photo Browse

There're 4 options: Turn off, 5 sec, 10 sec, 15 sec.

2.System Setting

There're 5 items: Upgrade, Restorable, Calibration OK, Shock, G-Sensor.

a.Upgrade

Click it will scan firmware automatically, and remind if you need to upgrade.

b.Restorable

Click it to restore all options, a dialog "Restorable?" will pop out for you double confirmation.. If click "yes", all will be restored to ex-factory default settings.

c.Calibration OK

Click white "+" on screen each twice, then will finish calibration and exit automatically. Remark: Calibration can only be saved after power off normally.

d.Shock

There're 2 options: on or off for choice.

g.G-Sensor

There're 2 options on or off for choice.

3□Time Setting

There're 2 options : Time and Date

a.Click "Time" to enter time setting interface, click / left/right to set hour and minute, click "yes" to save, or click "no" to cancel.

b.Click "Date" to enter date setting interface, click / left/right to set year,month and day, click "yes" to save, or click "no" to cancel.

4.Language

This player supports multiple languages.Double clock for confirmation.

5. System Information

Show product name, Major version ID,Hardware ID, Local Memory size, Card Memory size etc..

6.Auto Shut time

There're 6 options:3 Minutes, 5 Minutes, 10 Minutes, 15 Minutes, 20 Minutes, No automatic shutdown.Double clock for confirmation.

TF card operations

1. Insert TF card

Insert TF card into player, press TF card, it will pop out.

2. TF card connect with PC

TF card inserted in, 2 movable disks will be seen in my PC. At this time, you can operate the disk same as other portable disk.

3. Operations when without connection with PC

Enter "Explorer" interface, then "flash Memory" or "TF Card" is optional. Double click "TF Card", all its saved files will be displayed, double click again to play.

●Questions

No power	Please check if your player has power on
No voice in earphone	Check if voice volume was set to “0”. Check earphone connects well. Keep earphone clean. Broken MP3 may create some noise, or even can not play music, please confirm the file are complete.
Irrecognizable characters showed on screen	Please ensure in “language choice” setup that you have chose correct language.
FM receiving effect is not so good	Adjust the positions of earphone and player Shut down electric equipments nearby Earphone can be used as antenna
Music can not be loaded down normally	Check USB cable are good, and connection is ok Please check if drivers are installed properly Please check if there's free space on memory.

Specifications□

Display screen	3.0 inches of 206K TFT (400 * 240)	
PC link	USB2.0 High speed	
Memory	512MB ~ 8GB	
Power	polymer battery	
Play duration	Over long duration	
Recording	Sampling rate	8KHz
	MIC REC Format	wav(32Kbps)
	Record time	8hours□128M Flash□
Max output	(L) 11mW+ (R) 11mW(32Ohm)	
MP3 bit rate	8K bps - 320K bps	
AVI bit rate	5K bps - 384K bps	
Frequency response	From 20Hz to 20KHz	
Noise ratio	85dB	
Music format	MP3□WMA□APE□AAC□FLVC□OGG	
Video format	RM□RMVB□FLV□AVI□DAT□3GP	
Photo format	JPG□BMP□GIF	
temperature	-5 to 40 □	
Operating systems supported	Window SE/ME/2K/XP□	